


INSTALLATION MANUAL

For the most current release of this manual,
please visit our website at cogan.com

V.2015.1

PANIC BAR INSTALLATION DETAILS

Follow these instructions for the installation of your panic bar. Once your swing door is properly installed and hinges have been screwed to the partition post, you may finish the installation of the panic bar by attaching the receiving bracket to the post.

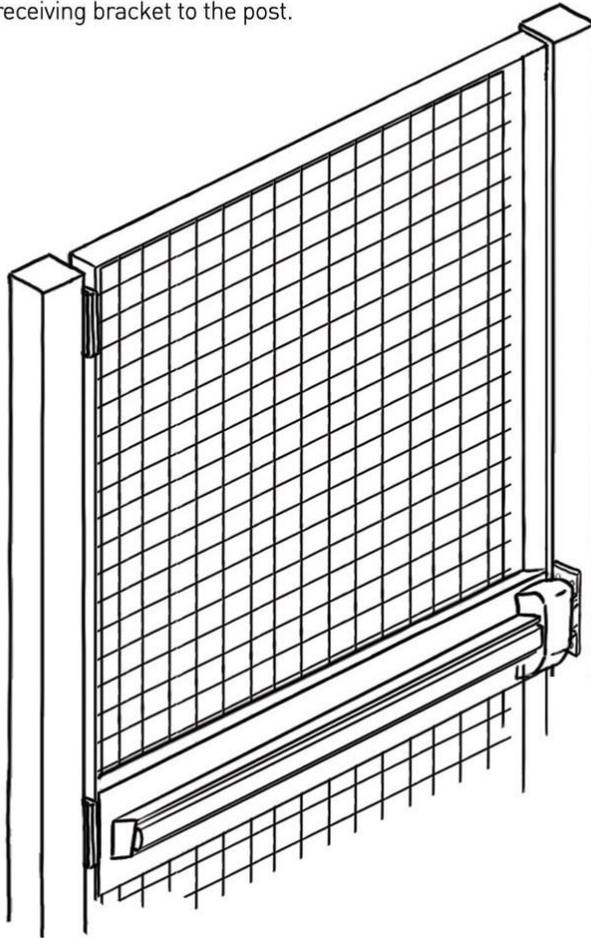

Drill holes in the post to bolt the
panic bar receiving bracket.
Put the nuts from the inside of the
partition.

Product	Partition
Sub-product	Locks - Panic bar




A Tradition of Quality Since 1901

cogan.com


PANIC BAR ASSEMBLY DETAIL




FOR 2"x 2" POST



FOR 2"x 4" POST

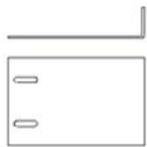

FOR 2"x 6" POST

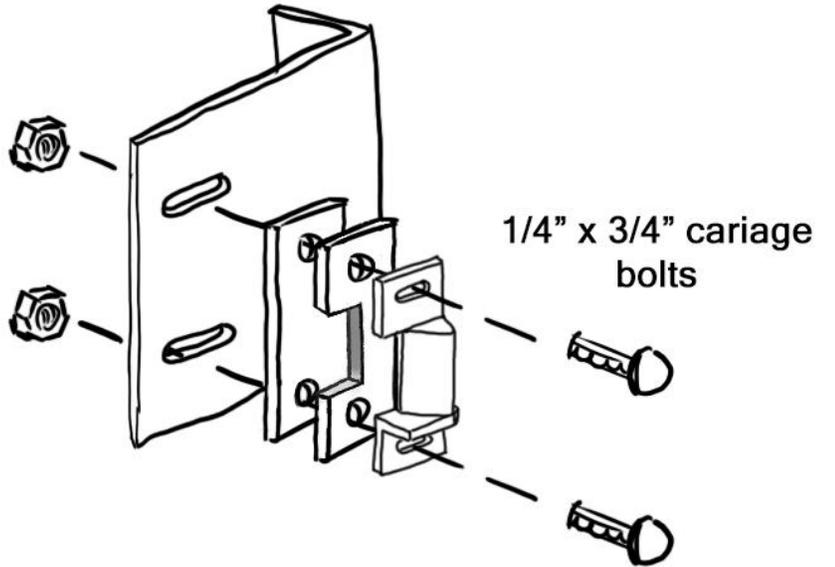

There is a different braket for every post

1/4" x 3" carriage bolts

